

Obie Operation Guide

Click on a subject to jump to its slide:

1. Onboarding
 1. Adjust Projection
 2. Internet
 3. Update
 4. Playmode
2. Remote Control
3. General Menu
4. Library
 1. Game Information
5. Playlist
 1. Game Settings
 2. Edit Playlist
 3. Manage Playlists
 1. Create a New Playlist
 2. Edit Playlists Settings
6. Schedules
 1. Create a Schedule
7. Settings
 1. Playmode
 2. Internet
 3. Timezone
 4. Adjust Projection
 5. Device Information
 6. Reboot Device
8. Contact Us



1. Onboarding



Installation

Please follow the instructions in your **installation guide** to set up the mount, secure your device, and adjust its projector.

You can find the installation guide on the [EyeClick Help Center](https://eyeclick-site.s3.eu-west-1.amazonaws.com/pages/resources/support/Obie-Installation-Manual-V.1.1.pdf) at:

<https://eyeclick-site.s3.eu-west-1.amazonaws.com/pages/resources/support/Obie-Installation-Manual-V.1.1.pdf>

1. Onboarding



Turning on your device for the first time

It may take up to **10 minutes** for the projection to power up for the first time.

 
 


Please wait while your Obie wakes up...

1. Onboarding

Next you'll be presented with an overview about how to use your **remote control**.

Continue by pressing the **OK button** on your remote control.

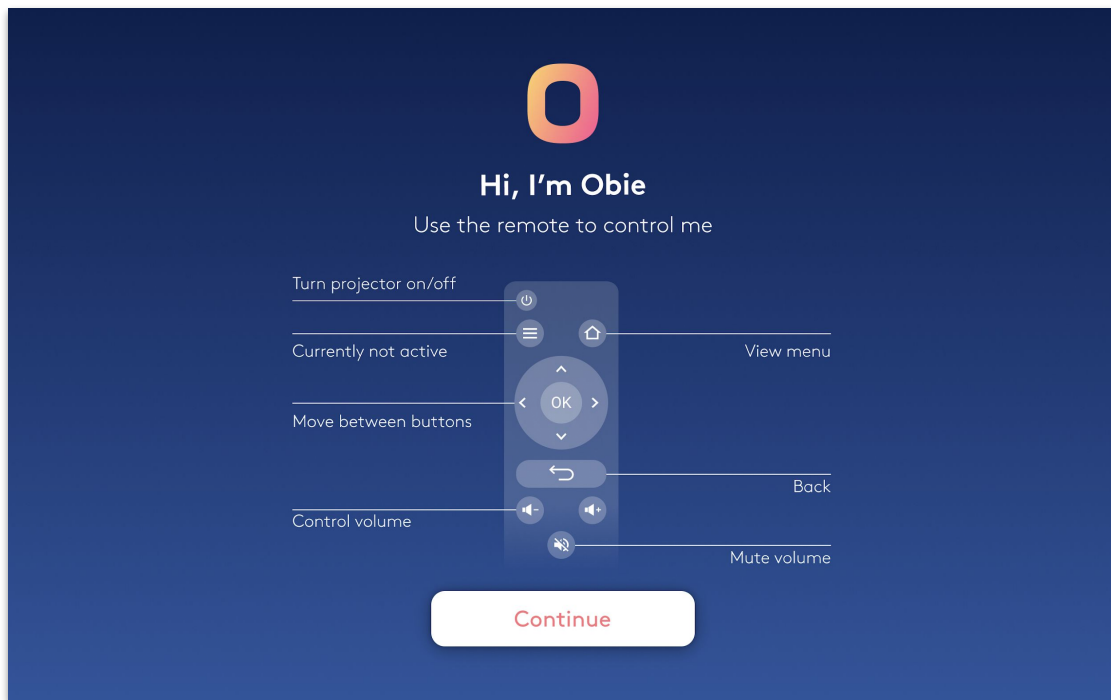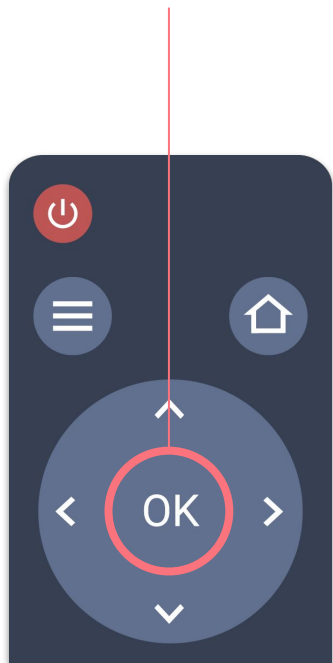

1. Onboarding / 1. Adjust Projection

If needed, **adjust the projection** before selecting the **Continue button**.

Use the **arrow buttons** on your remote control to move to one of the adjustment options:



Rotate projection 180°

 


Flip projection



Adjust Projection Keystones

If the projection is **skewed**, straighten it by moving its **corners**.

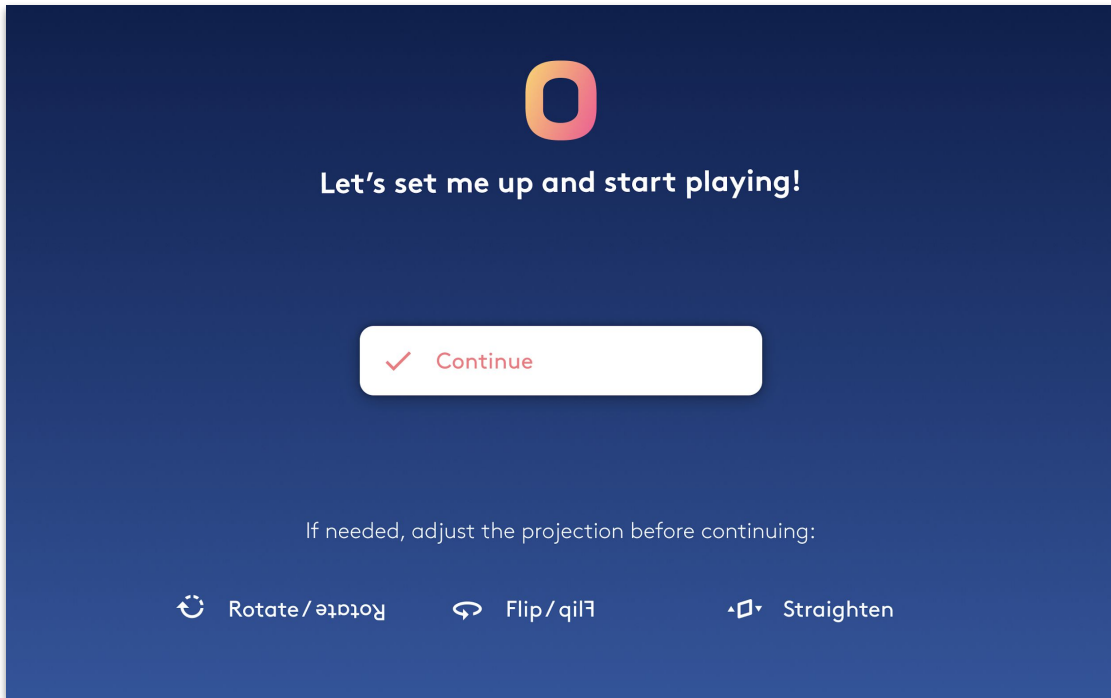

1. Onboarding / 2. Internet

You **must** have an available **internet connection** to complete your device's initial activation.

 
Select a network from the list and enter a **password** if one is required.



Ethernet Connection

Connecting your device to the internet via a **physical Ethernet cable** is **preferred**.

The device will **skip** this step if it is already connected.

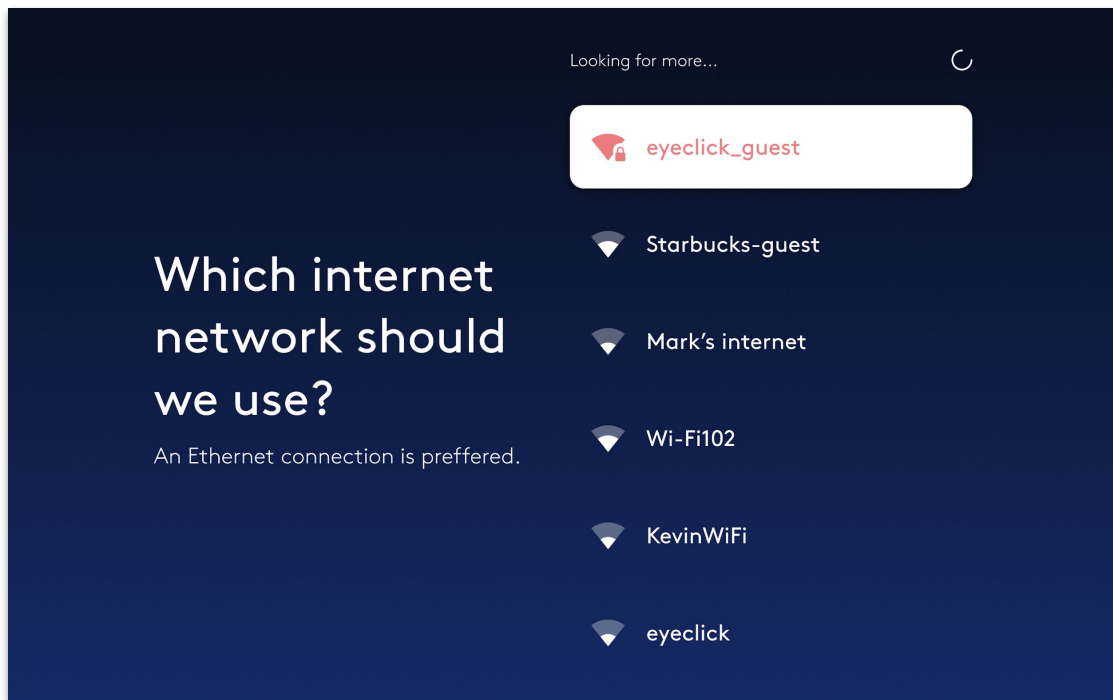

1. Onboarding / 3. Update

Your device might have an **update available** for it. If so, please select one of these **two options**:

 
Update later

The device will wait until it's in sleep mode to download and install the update.

Update now

Downloading and installing the update might take up to **30 minutes**.

Please **don't disconnect** your device from **power** or **internet** during the update.

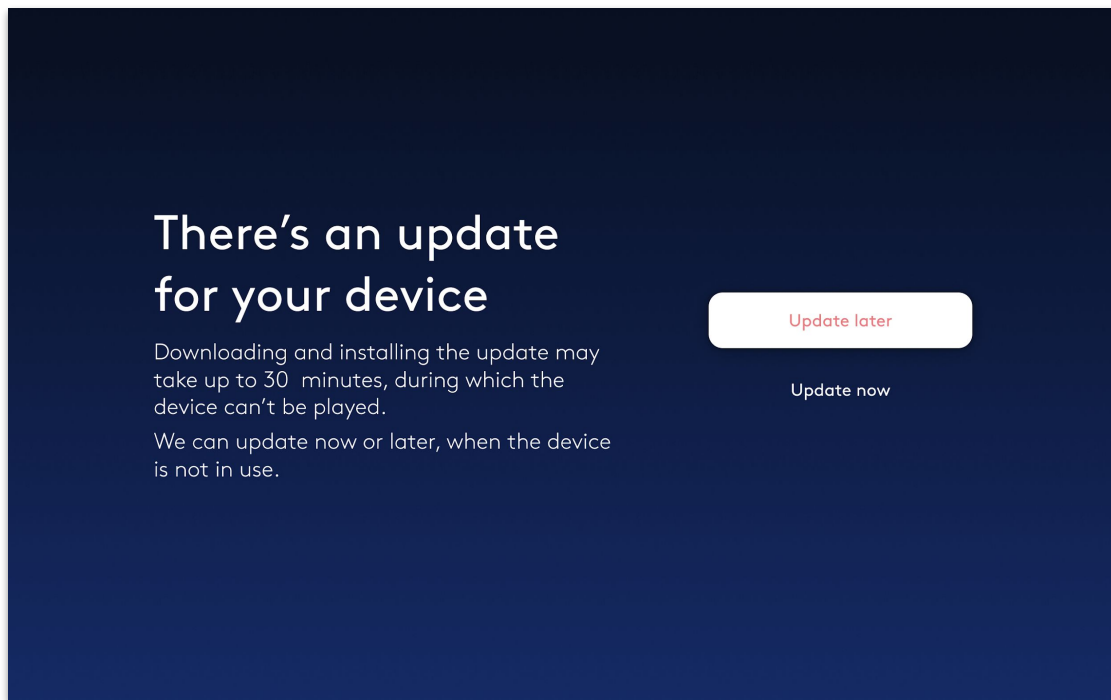


1. Onboarding / 4. Playmode

Please select what surface your device is projecting on. You can always change it later.

Please note

Each **playmode** requires **physically adjusting** the device's **camera** and **mirror** into a specific configuration.

 Once you select a playmode you'll be presented with **instructions**.

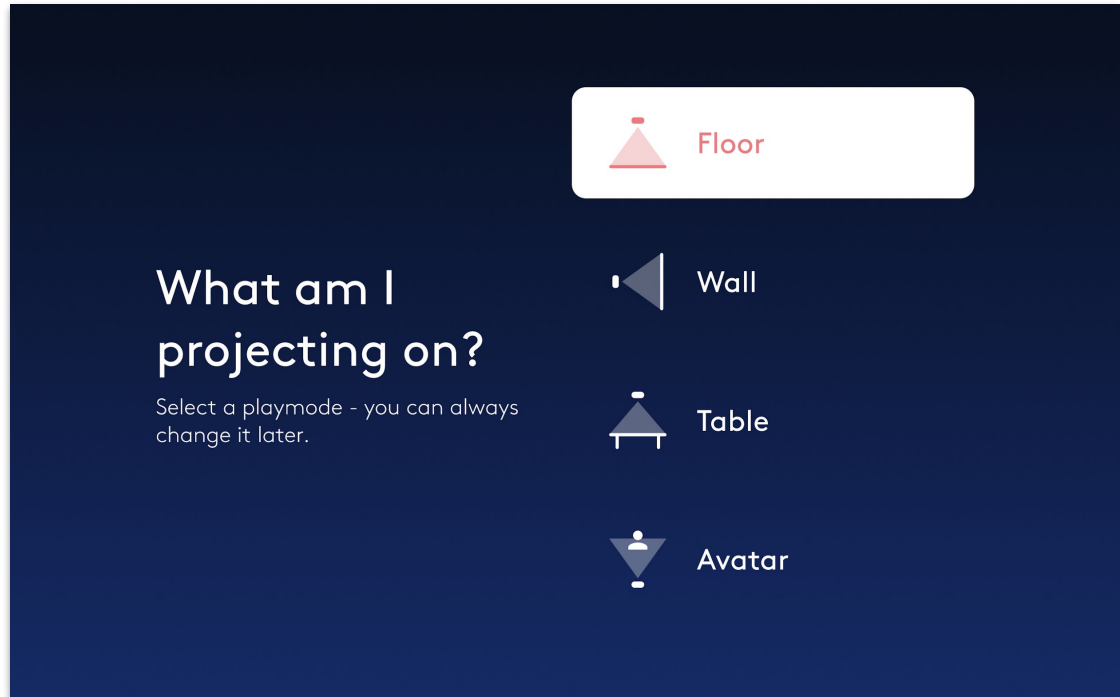


1. Onboarding / 4. Playmode

Your device will need to **calibrate its motion sensor** once you've selected a playmode.

If needed, **re-adjust the projection** using the options below before selecting the **Continue button**.

Please note

 Make sure the **projection area** is **clear** of **any obstructions** during the calibration.

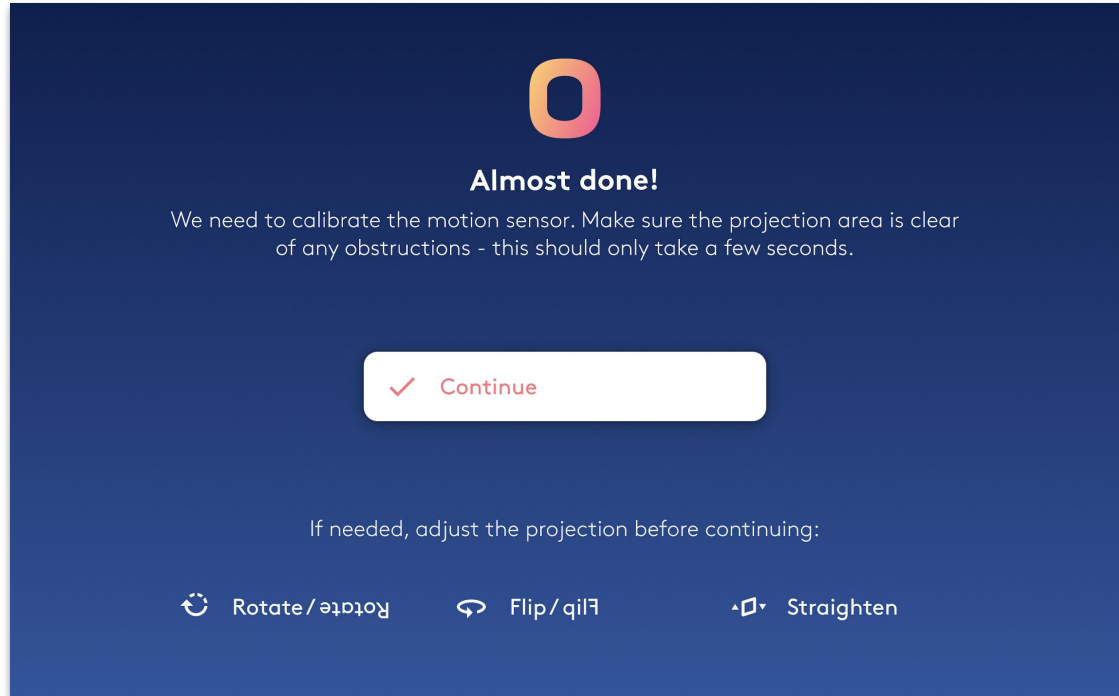


2. Remote Control

Turn projector on / off

Currently not active

Navigate the menus

 Control volume

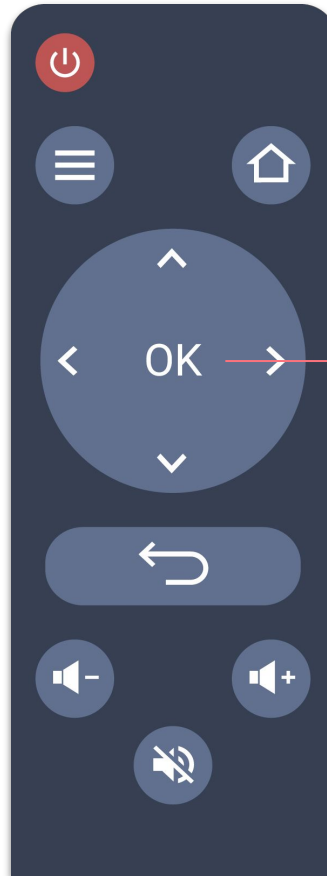

View the general menu

 
 
Select

Back to previous screen

3. General Menu

This is the general menu.

You can get here from any screen or game by pressing the **home button** on your remote control.

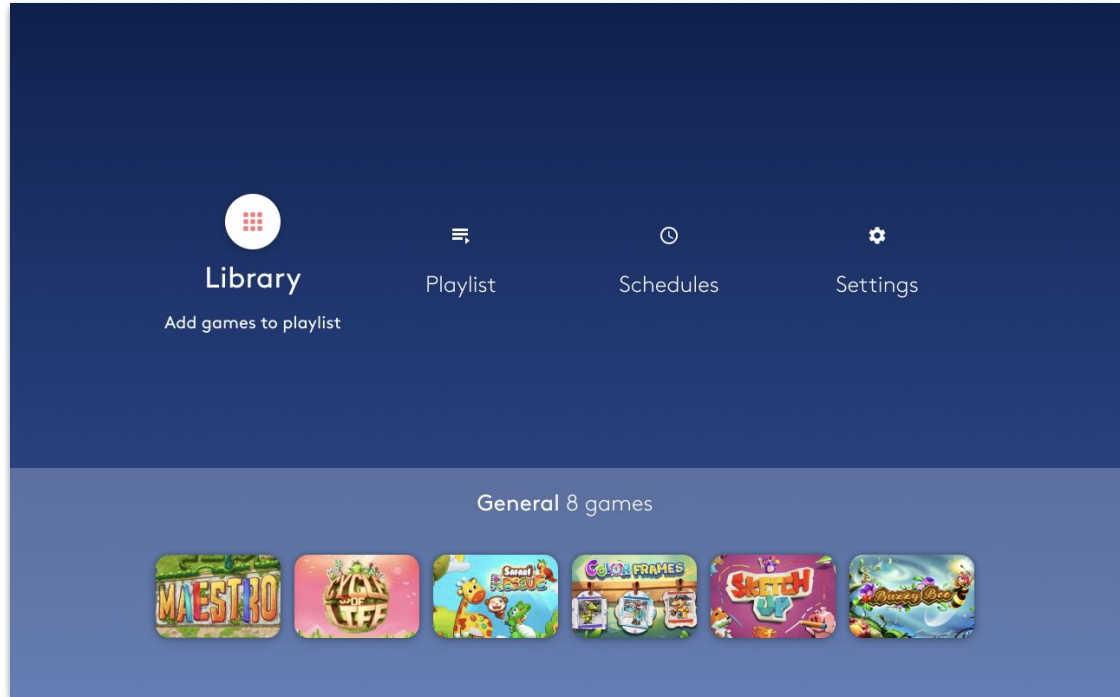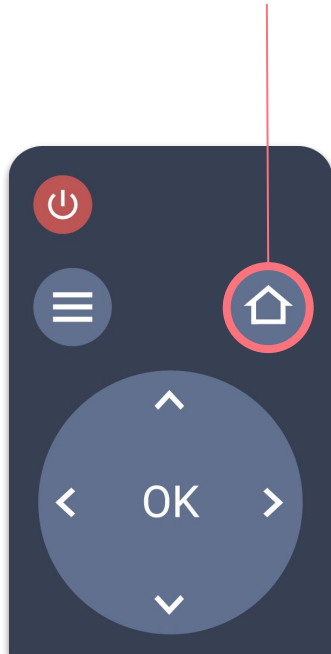

3. General Menu



Library

View and manage all the games available for your device.



Playlist

Play and control your playlists.



 
Schedules

Set the times during which your device will automatically operate or enter sleep mode.



Settings



View and edit your device settings.

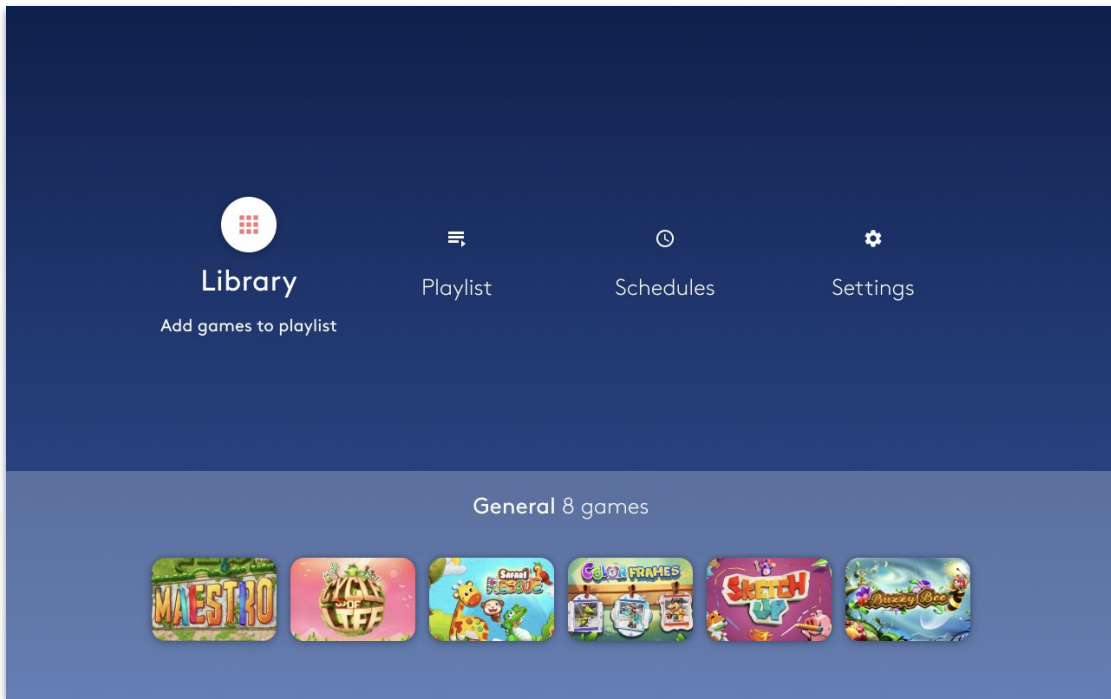

3. General Menu

- ▶ You can also view the currently set playlist and start playing it.

  To do so, simply go to the game you want to start playing the playlist from, and select it with the **OK button** on your remote.

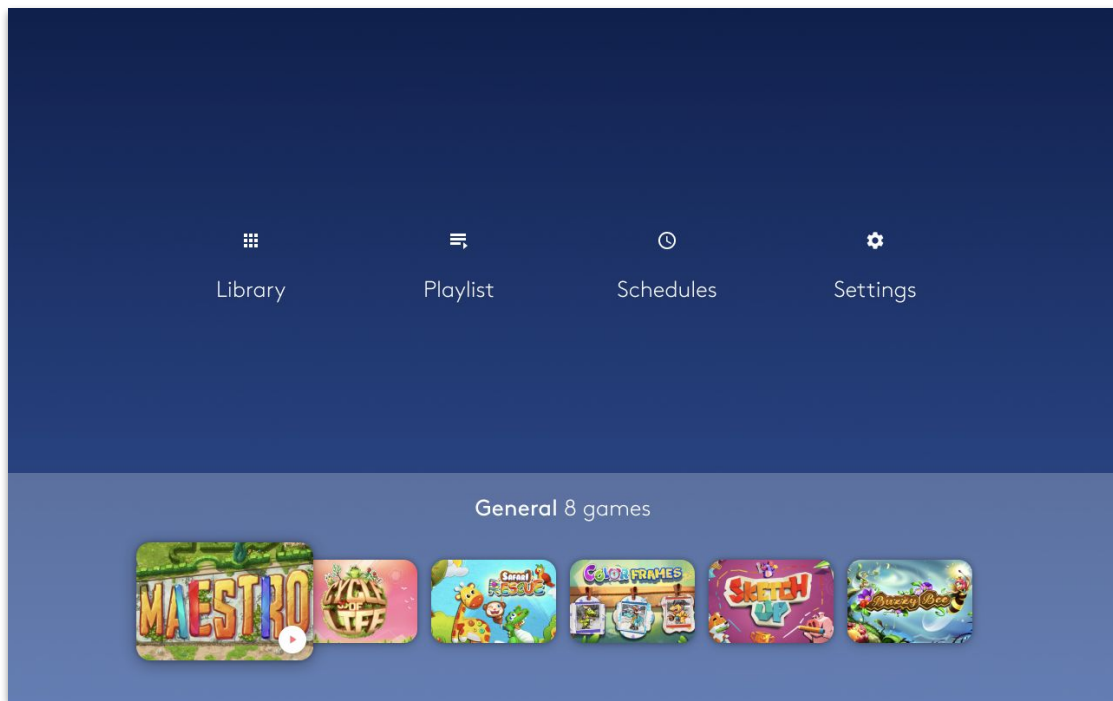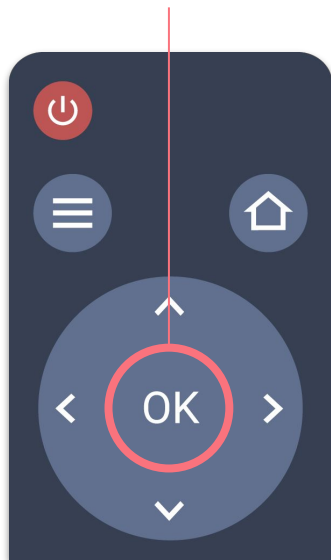

4. Library

The Library contains all the games **available for your device**.

Here you can **add games to your playlist**, where you may play them.

 
You can **filter** the games list using the tags above it. Move to the desired tag and select it with the OK button on your remote.

The list will **refresh** to only include games fitting that tag.



Add all games to the playlist

Select the **add all** icon at the top right corner to add all the games on the list to your playlist.

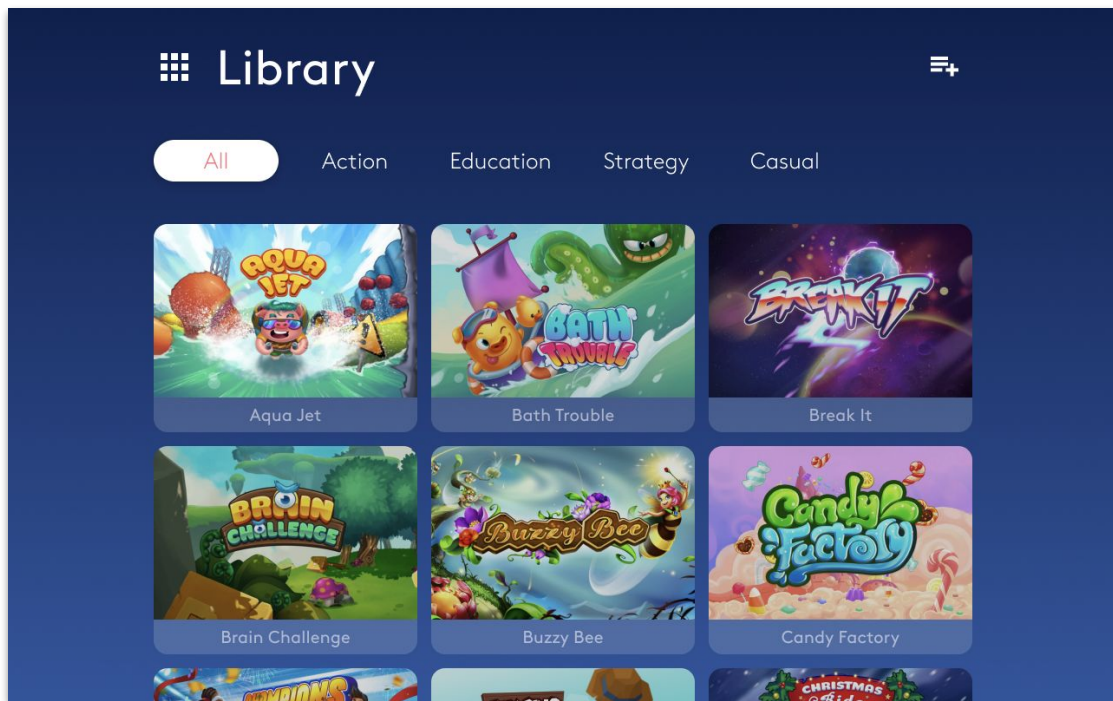

4. Library

Use the **arrow buttons** on your remote to browse the games. Select a specific game with the OK button.

Once a game is selected, you can:



 
Add the game to the playlist

You can add the same game to a playlist multiple times.



View game information

Access the game's information and details.

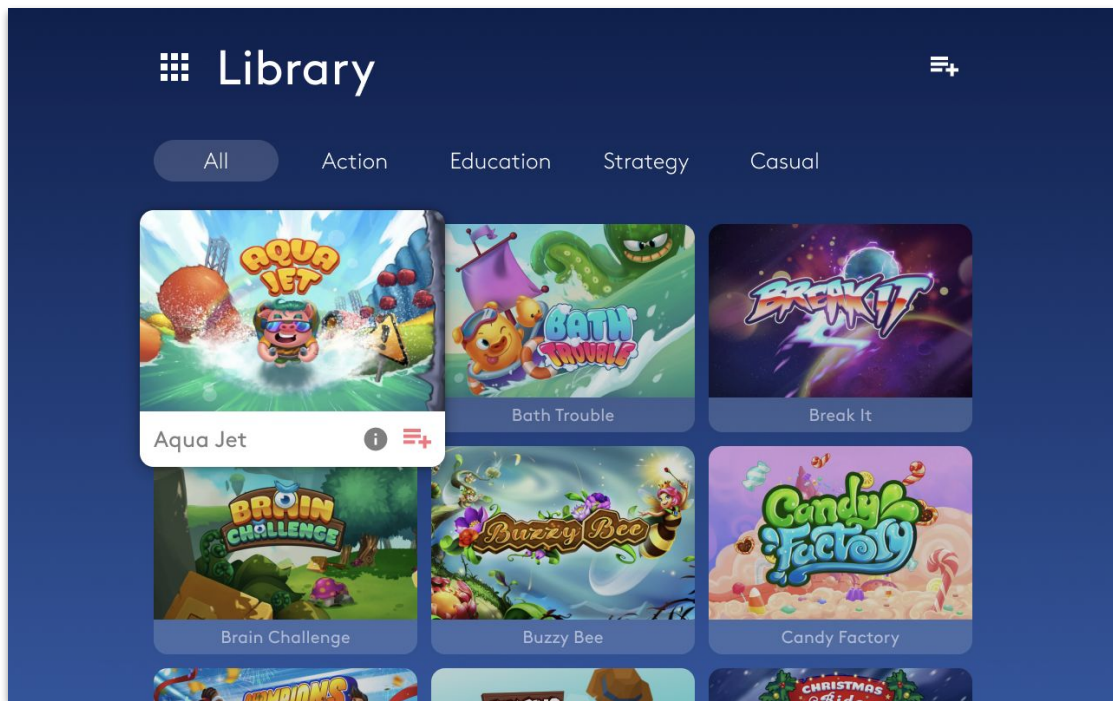



4. Library / 1. Game Information

Here you'll see the game name, amount of players, the game's tags and description.

Select the **Add icon** to add the game to your playlist.

You can also select one of the game's tags to **filter the library** according to that tag and show you similar games.

  To **exit** the game information, press the **back button** on your remote control.

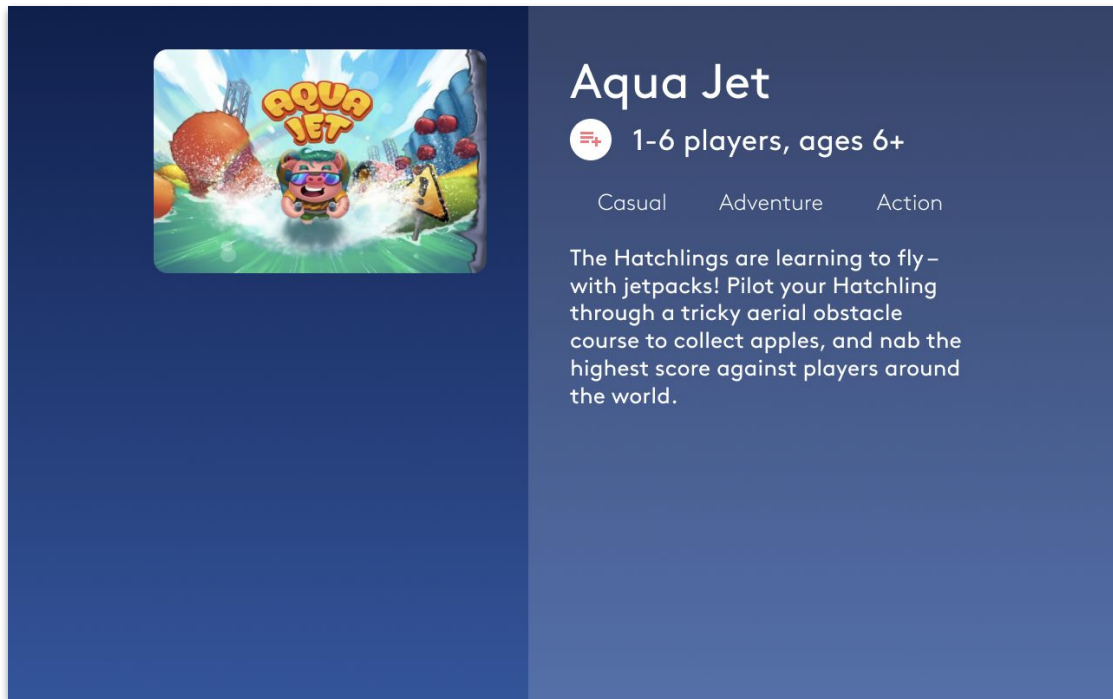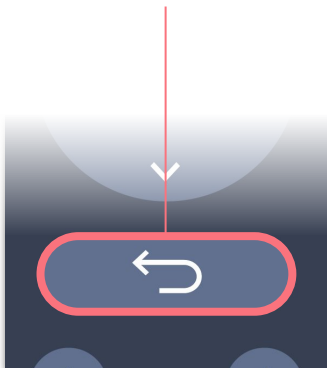

5. Playlist

Please note

You can only play games that have been **added to the playlist**.

 
If the Library has **all the games** available, the Playlist shows you which games you've **selected to play**.



Play

To start playing, select the Play button at the **top right corner**.

If you want to start playing a **specific game** simply scroll down and select its Play button.

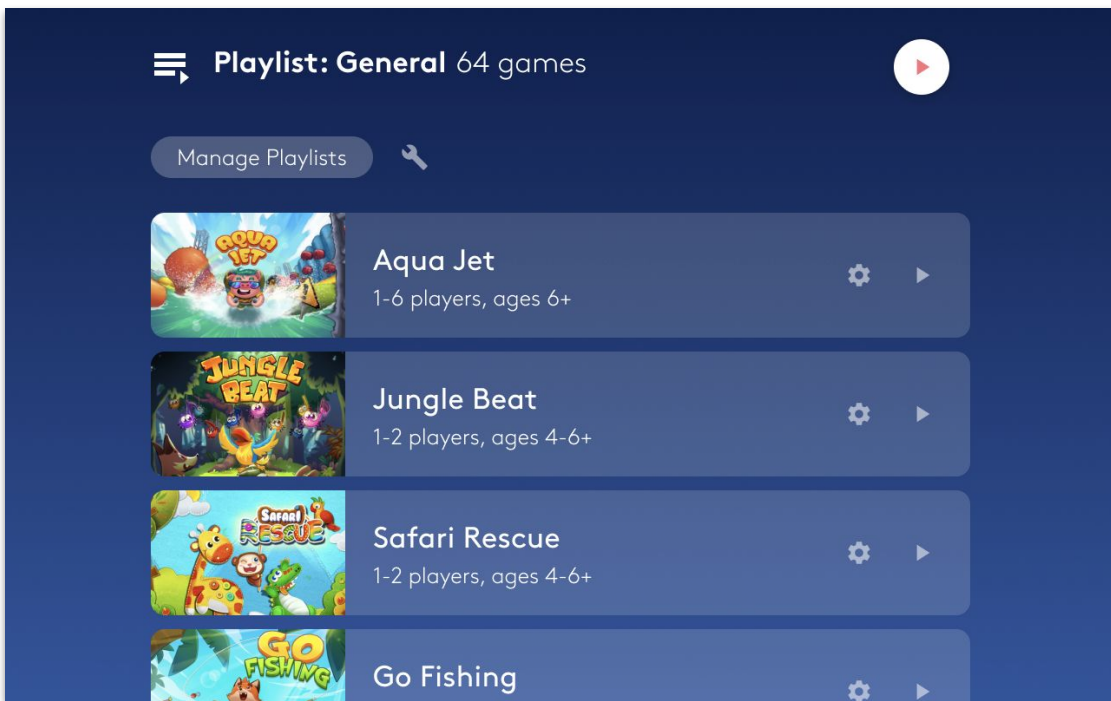

5. Playlist / 1. Game Settings

 


Game Settings

Some games also have their own settings.

You can view and adjust them by selecting the **Games Settings icon**.

A game in multiple playlists can have different settings in each playlist.

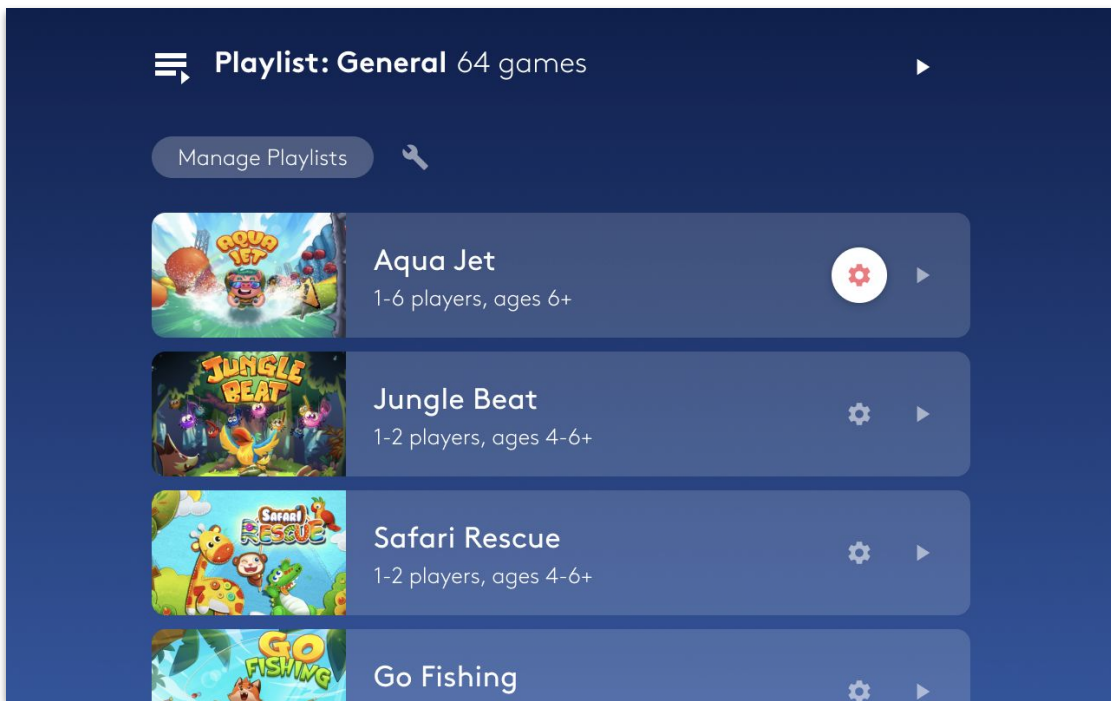


5. Playlist / 1. Game Settings

Different games may have **different settings options**, like enabling or disabling sound effects, starting at a later stage, or choosing a difficulty level.

Select **Apply** once you're done to return to the Playlist.

 Selecting **Cancel** will exit this screen and reset any changes you've made.

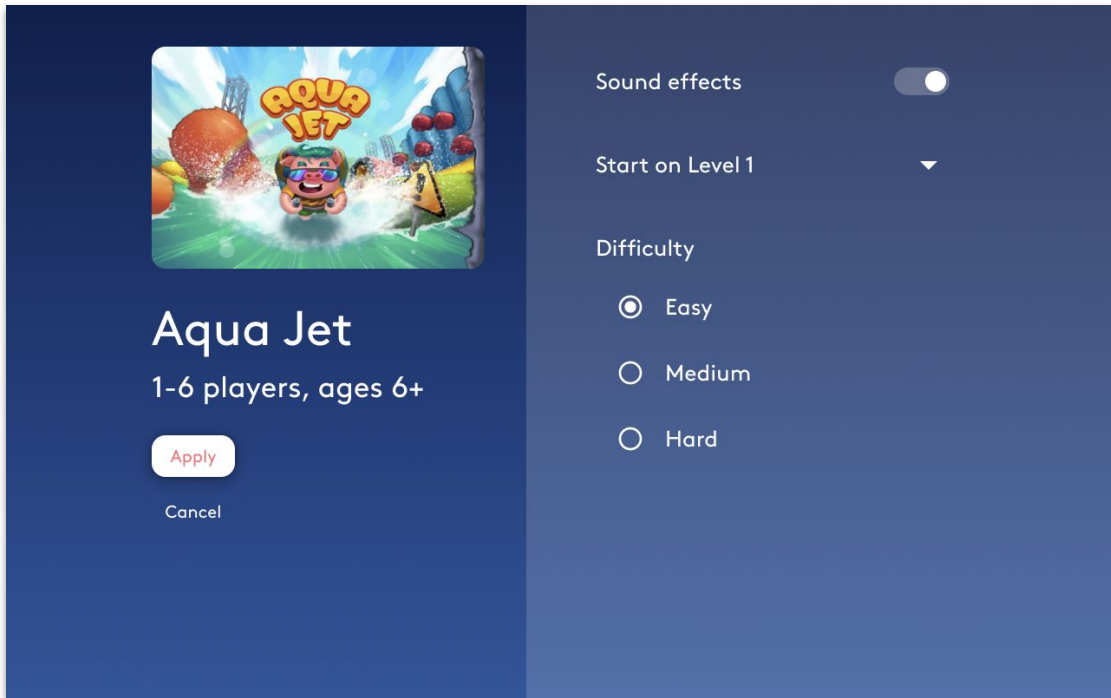


5. Playlist / 2. Edit Playlist



Edit Playlist

 You can edit the settings of a game in the playlist, but you can also edit the **playlist settings** by selecting the **Edit icon** above the games.

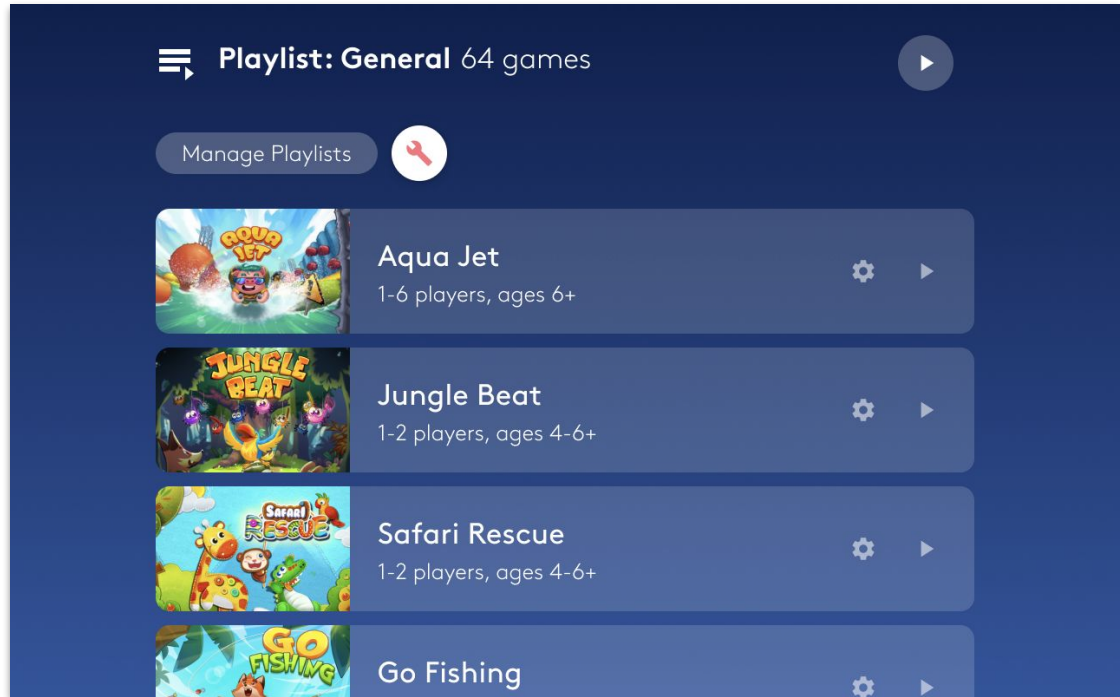

5. Playlist / 2. Edit Playlist

The **options** above the games list change when you enter **Edit Playlist** mode.



 
Playlist duration

Select the Duration icon above the list to set **how long** you want **each game** to play for, before moving to the next game.



Remove all

Select the **Trash icon** above the list to remove all the games from this playlist.

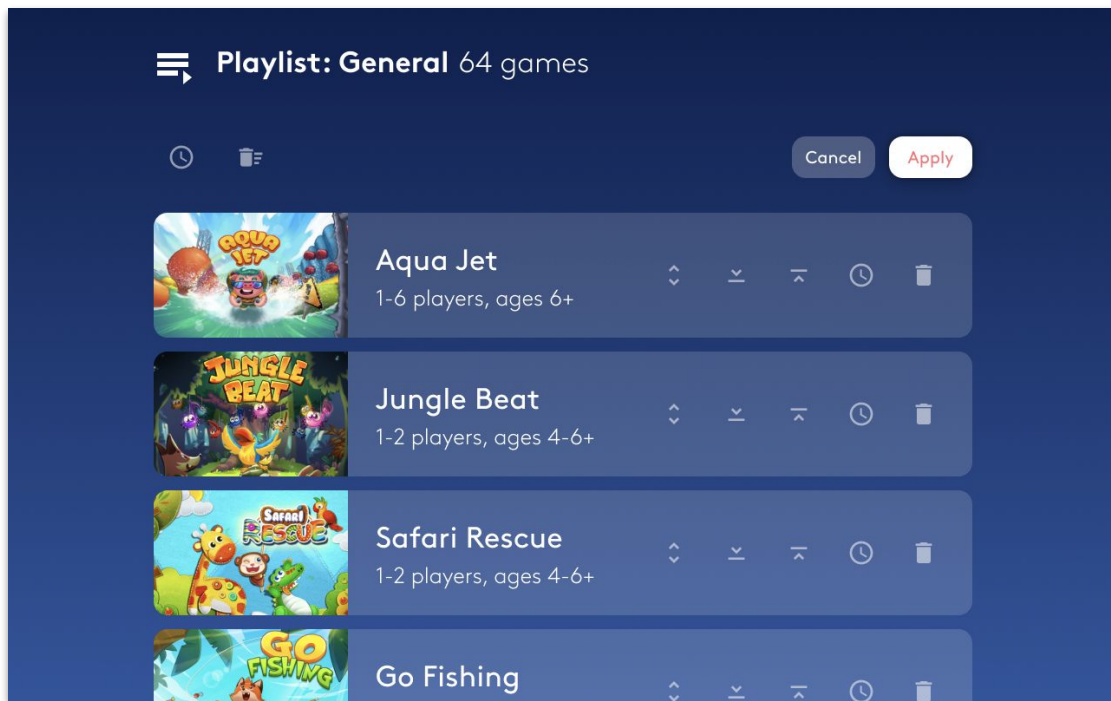

5. Playlist / 2. Edit Playlist

The **game cards** in the list also have options for those **specific games**.



 
Remove game

Remove this game from the playlist.



Game Duration

Set the duration of this game.

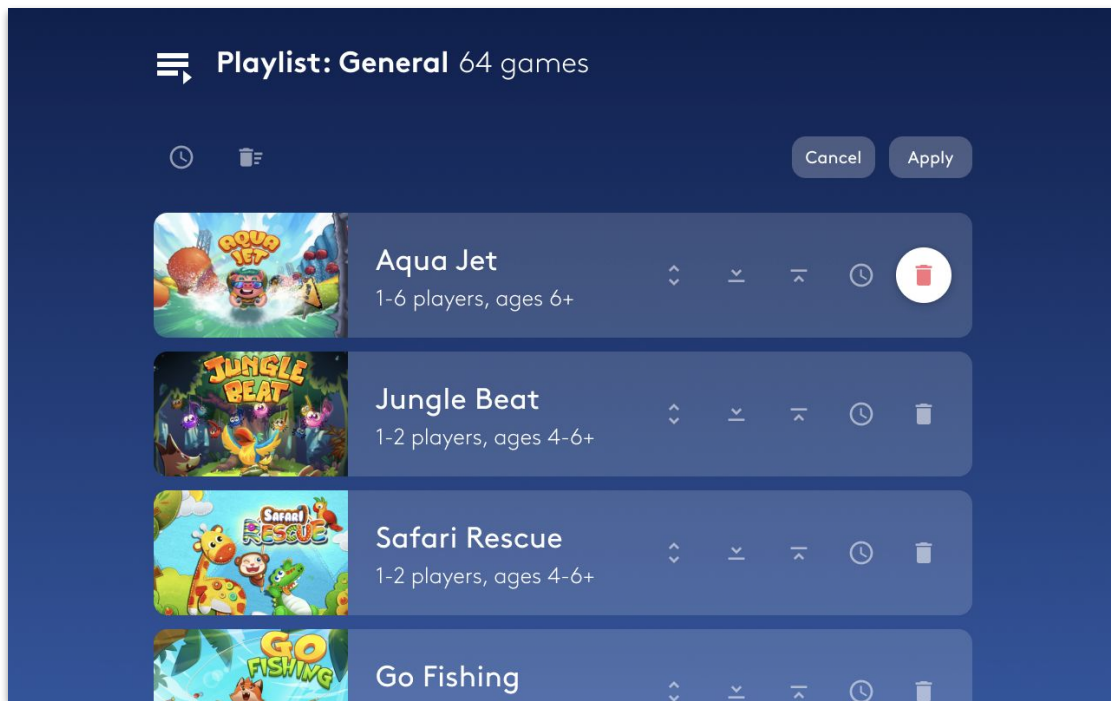

5. Playlist / 2. Edit Playlist

You can also sort and arrange the order of the games in the list through the controls on their cards.


 **Move to top**

  **Move to bottom**

 **Move game**

Once this icon is focused, use the **Arrow buttons** to move the game **up** or **down** the games list.


Select **Apply** once you're done, or **Cancel** to reset any changes you've made.

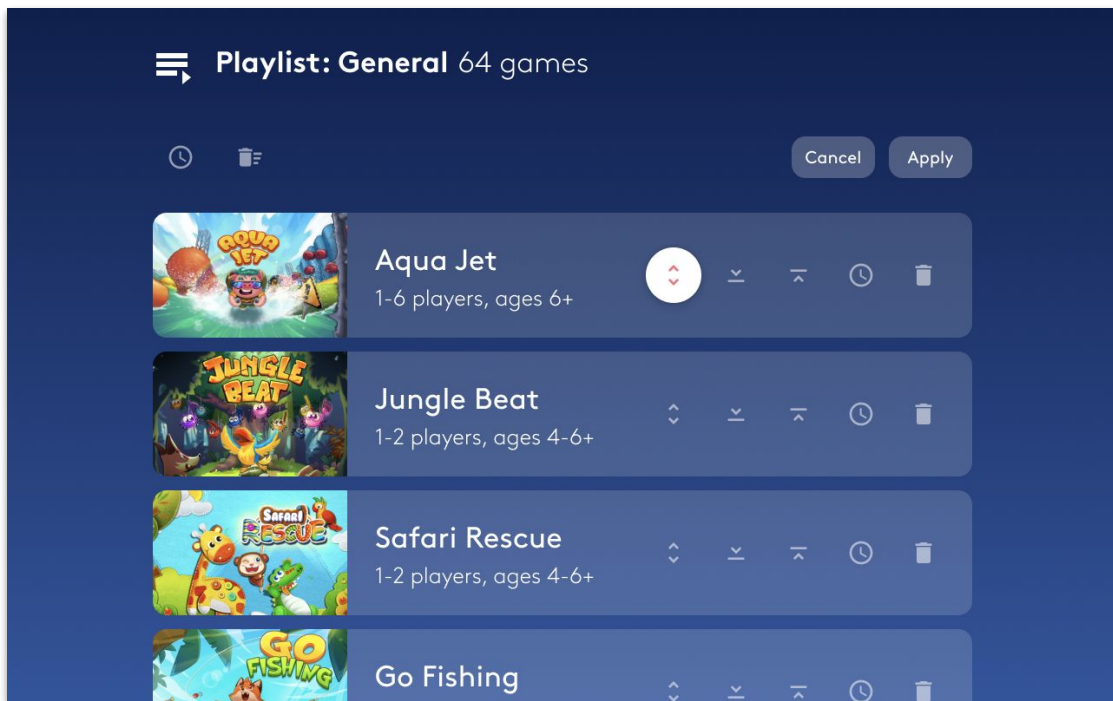

5. Playlist / 3. Manage Playlists

Your device can have **several playlists** - for different users, events, or games.

 Select the **Manage Playlists button** to view all your playlists.

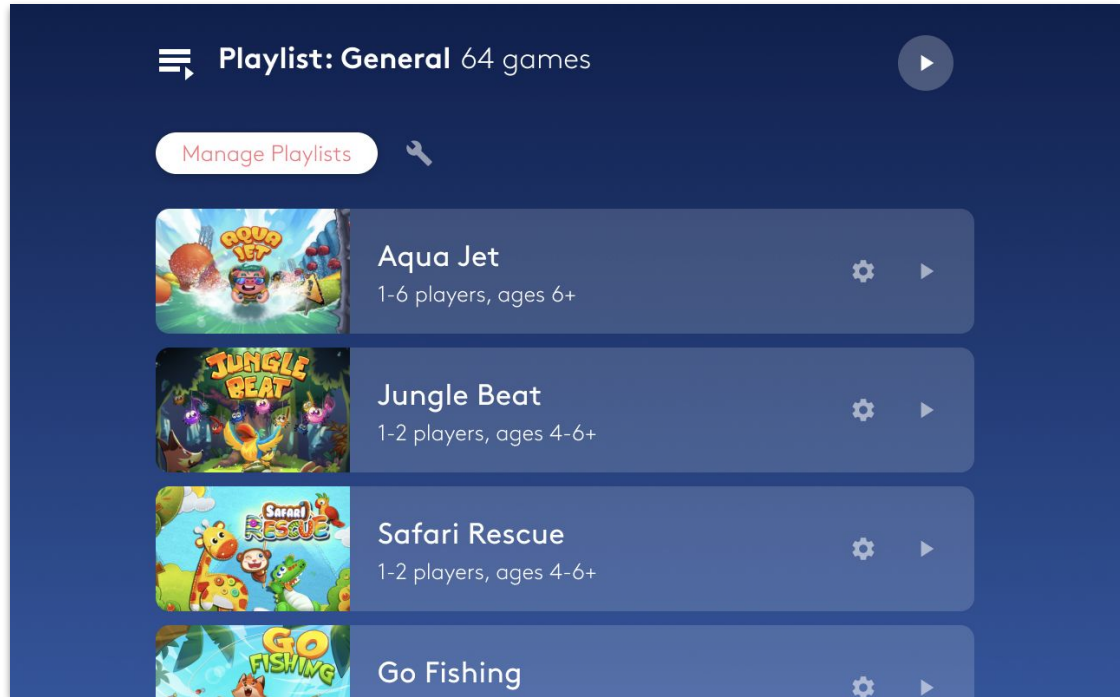

5. Playlist / 3. Manage Playlists

 
This is your **Playlists list**, showing all the playlists on this device.

Select the **Load button** to load a playlist and set it as the current one.

The **General** playlist is the default one and is always at the **top** of the list.


Please note

Any changes you make in the main **Playlist screen** - arranging games, changing duration, etc. - will apply on the currently **loaded playlist** and are **automatically saved**.

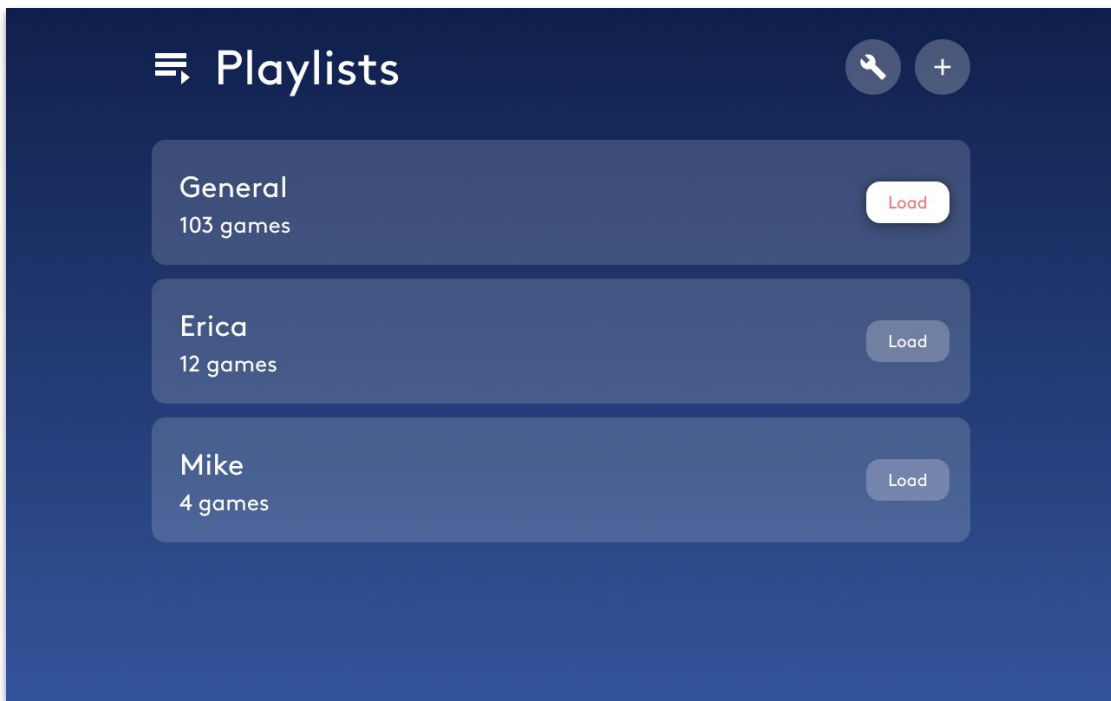

5. Playlist / 3. Manage Playlists / 1. Create a New Playlist

 Create a new playlist by selecting the **Add icon** with the OK button on your remote control.

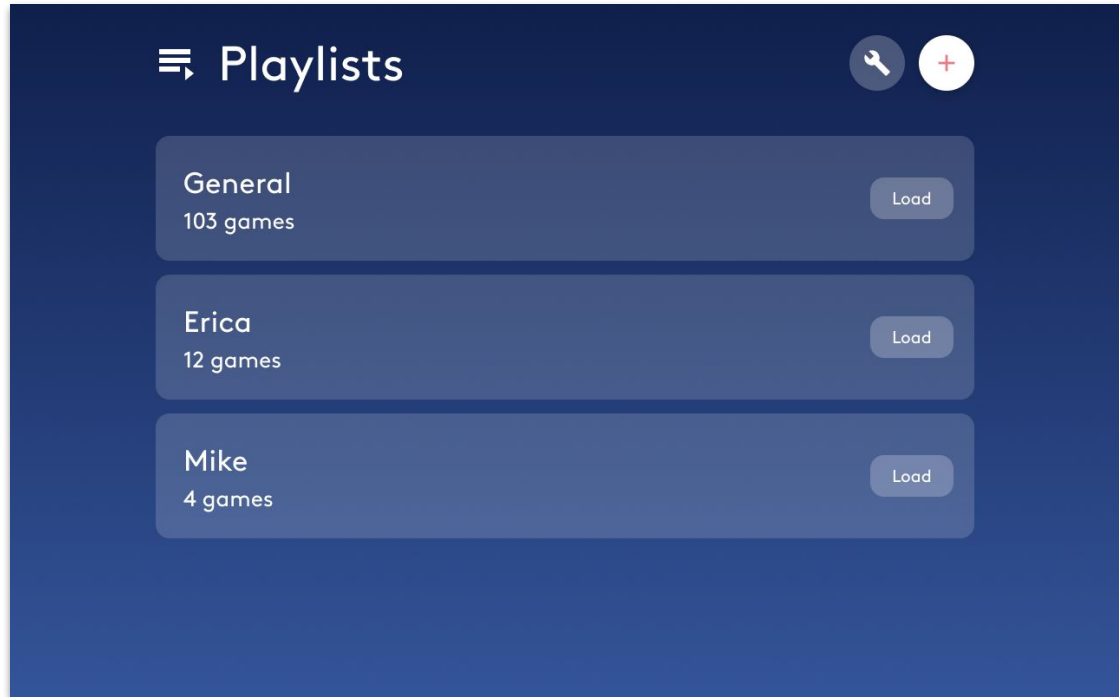

5. Playlist / 3. Manage Playlists / 1. Create a New Playlist

Edit the new playlist's **settings** before selecting the **Save** button to continue.



Edit playlist name



Enable analytics

If you have access to **EyeClick Analytics**, you can decide if you want to **track** this playlist.



Duplicate from another playlist

Duplicate all the **games and settings** from **another** playlist to this **new** one.


Simply check the **checkbox** and **select a playlist** from the drop down menu.

The screenshot shows a dark blue interface titled 'Playlists' with a hamburger menu icon on the left and a 'Save' button in the top right corner. Below the title, there are three settings rows:

- The first row is 'New playlist' with a wrench icon to its right.
- The second row is 'Analytics enabled' with a toggle switch to its right.
- The third row is 'Duplicate existing playlist' with a checkbox to its right.

5. Playlist / 3. Manage Playlists / 2. Edit Playlists Settings

 Edit your **playlists settings** by selecting the **Edit icon** with the OK button on your remote control.

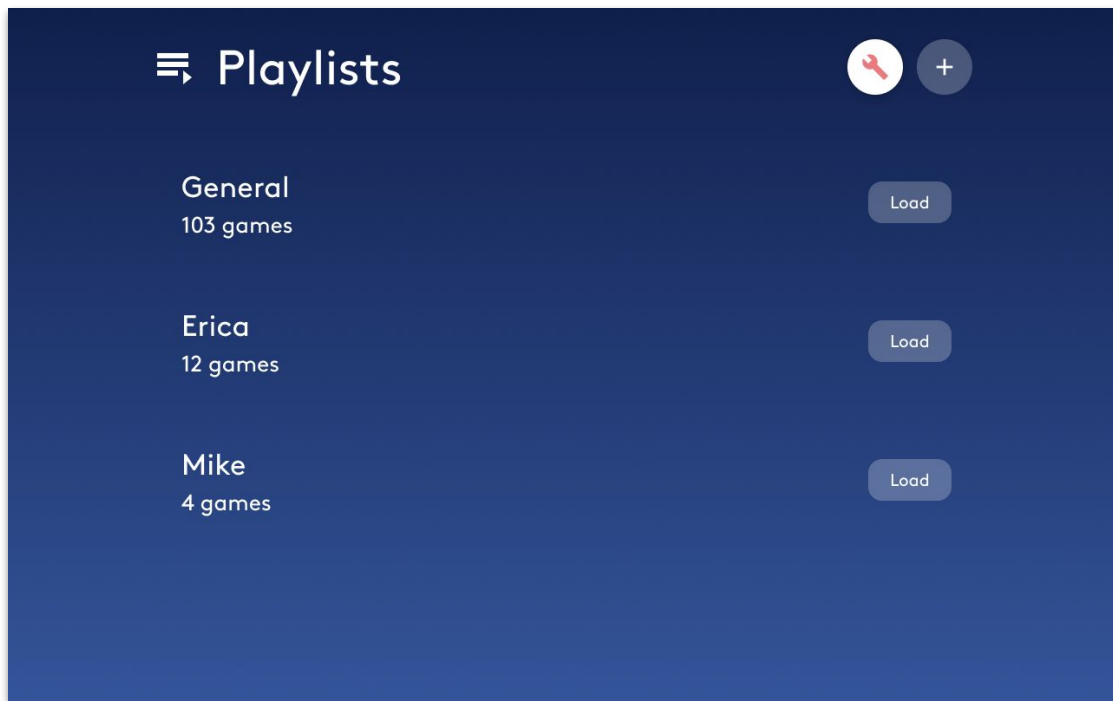

5. Playlist / 3. Manage Playlists / 2. Edit Playlists Settings

Select the **Done** button once you've adjusted the settings.

Please note that the **General** playlist **cannot be renamed or deleted**.


 **Enable analytics**

  **Duplicate playlist**

Create a **new playlist** with this playlist's **games and settings**.

 **Delete playlist**

 **Rename playlist**

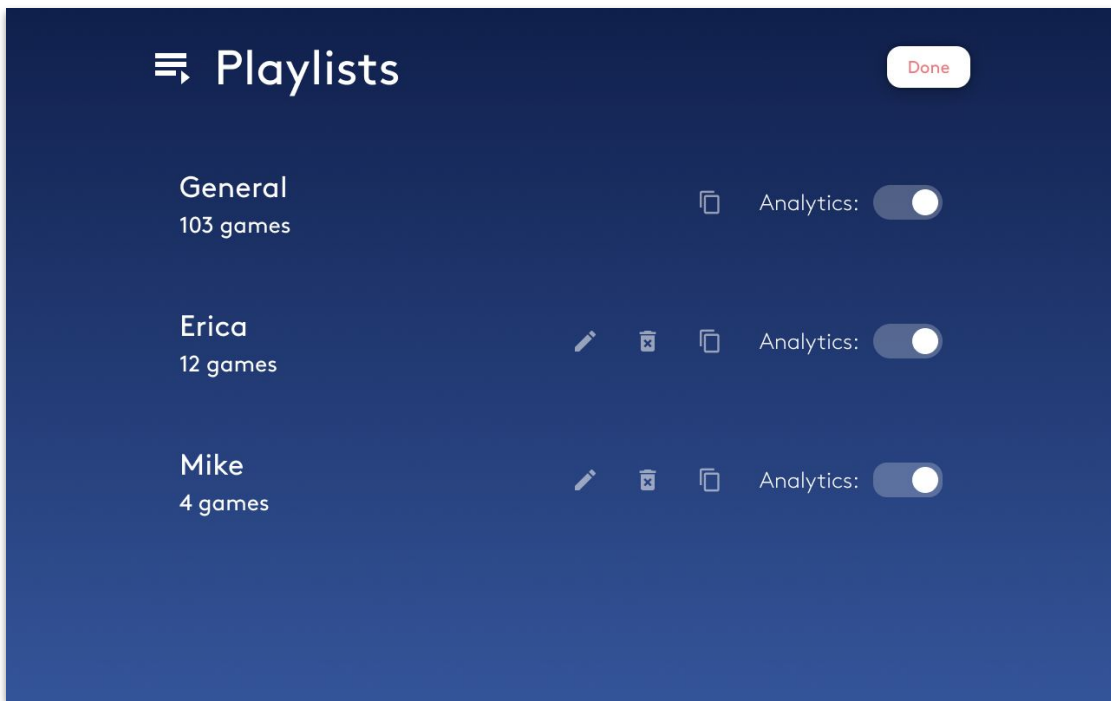


6. Schedules

You can create **schedules** which will control your device for you **automatically**. To do so, go to **Schedules** through the **general menu**.

You can see all existing schedules in the **list**.

You can have as **many schedules** as you'd like, as they are **additive** in an **inclusive manner**.

 For example, if you set a schedule for your device to be awake between **2-4 PM** and another schedule between **3-6 PM**, the device will be awake **continuously** between **2-6 PM**.

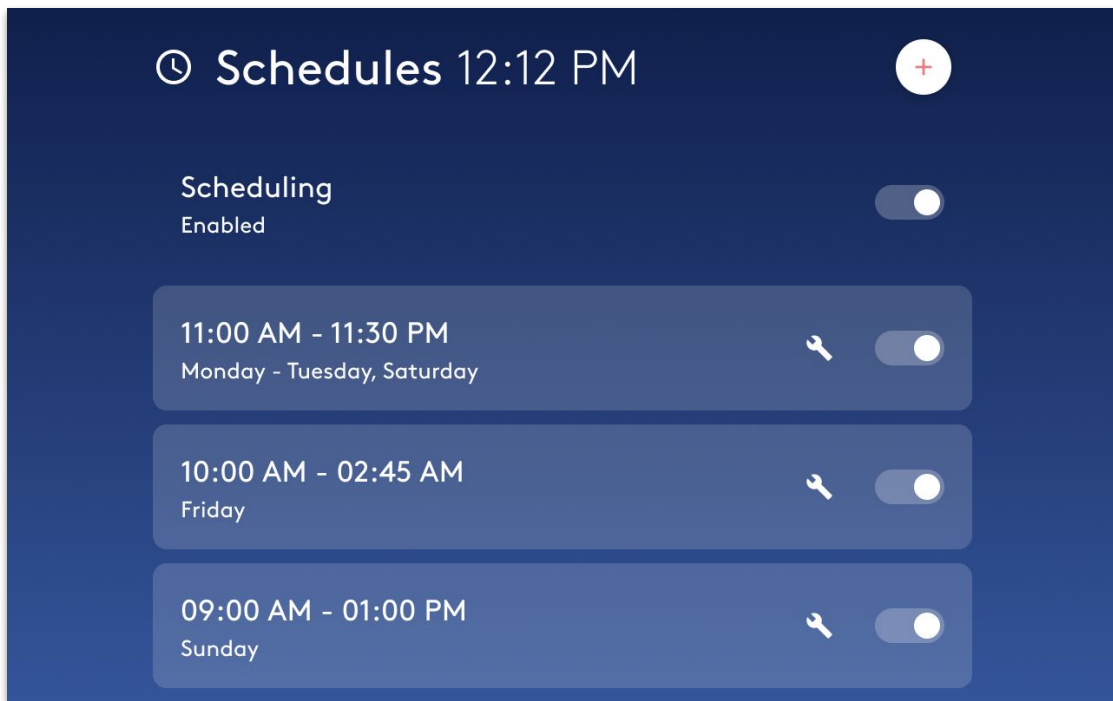

6. Schedules

 
You can disable **scheduling** through the **toggle** above the list.

The device will continue to operate until you turn the projector off using the **power button** on your remote control.

Please note

Scheduling only affects the **device's projector** - a schedule **cannot load a new playlist**.

The playlist loaded and set when the device entered sleep mode will be the one used when it awakes.

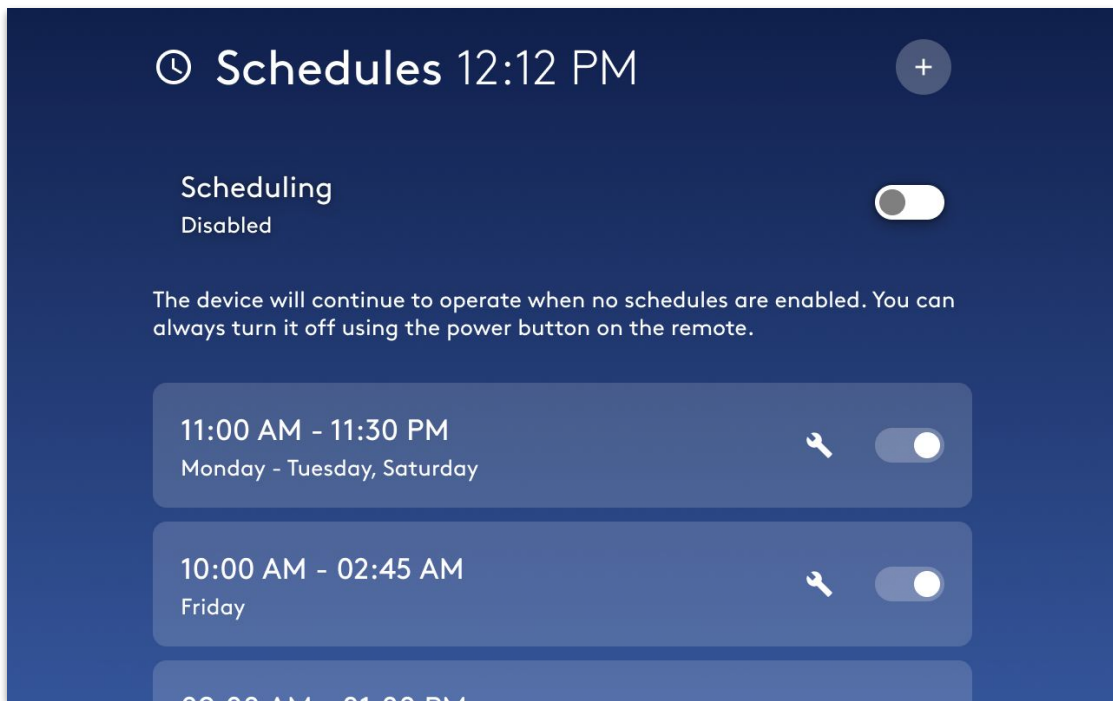

6. Schedules

You can also control **individual schedules**.



 
Enable schedule

Disable or **enable** a specific schedule by selecting its **toggle**.




Edit schedule

Select the **Edit icon** to **delete** a schedule or edit its **operating times** and **days**.

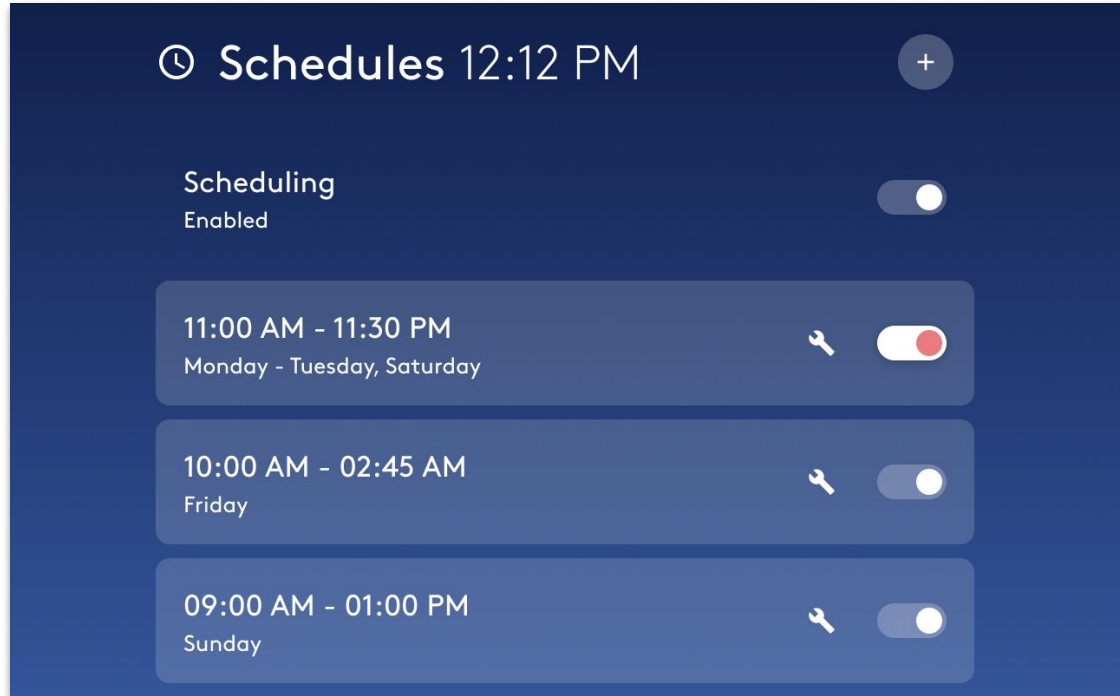

6. Schedules / 1. Create a Schedule

 To create a **new schedule**, simply select the **Add icon** at the top right corner with the **OK button** on your remote control.

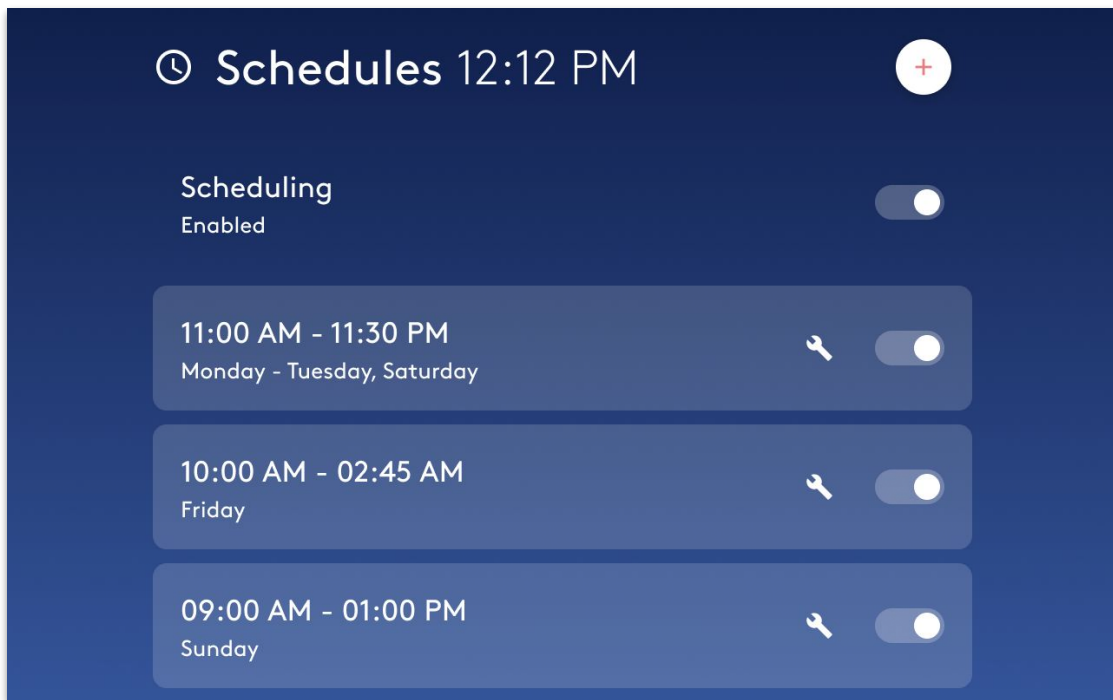

6. Schedules / 1. Create a Schedule

Edit the **Start** and **End** times of the schedule and on which **week days** it should operate.

🕒 Schedule

Save

Start time

11 : 11 AM

End time

11 : 11 AM

Active week days

All days

Monday

Tuesday

Wednesday

Thursday

Friday

Saturday

Sunday

6. Schedules / 1. Create a Schedule

To edit the **Start** and **End** times:

1. Move to the **time card** and select it with the **OK button** on your remote control.
2. You'll be focused on the **hours slot** inside the card. Use the **Up** and **Down arrows** on your remote to change the time.
3. Use the **right** and **left arrows** to move between the hours, minutes and AM/PM.
4. **Exit** the time card using the **Back button** on your remote.

The screenshot displays a 'Schedule' interface on a dark blue background. At the top left is a clock icon and the title 'Schedule'. At the top right is a 'Save' button. Below the title are two large rectangular cards for 'Start time' and 'End time'. The 'Start time' card shows '11 : 11 AM', with the '11' in the hours slot highlighted in red and having up/down arrows above and below it. The 'End time' card shows '11 : 11 AM'. Below these cards is a section titled 'Active week days' containing eight buttons: 'All days', 'Monday', 'Tuesday', 'Wednesday', 'Thursday', 'Friday', 'Saturday', and 'Sunday'.

6. Schedules / 1. Create a Schedule

You can choose on which **days of the week** the schedule will operate.

New schedules are set to be active during **All days** by default.

Move to the desired day and **select** or **deselect** it using the **OK button** on your remote controller.

Select the **Save button** to finish.

The screenshot shows a 'Schedule' interface with a dark blue background. At the top left is a clock icon and the title 'Schedule'. At the top right is a 'Save' button. Below the title are two large input fields for 'Start time' and 'End time', both set to '11 : 11 AM'. Below these is a section titled 'Active week days' with seven buttons: 'All days', 'Monday', 'Tuesday', 'Wednesday', 'Thursday', 'Friday', 'Saturday', and 'Sunday'. The 'Monday' button is highlighted with a white background and red text, while the others have a dark blue background with white text.

Start time	End time
11 : 11 AM	11 : 11 AM

Active week days

All days	Monday	Tuesday	Wednesday
Thursday	Friday	Saturday	Sunday

7. Settings

 
The settings area is divided into 2 sides:

Left side

A **list** of all the subjects and menus under settings. Browse them using the **Up** and **Down arrow buttons** on your remote control and select using the **OK button**.

Right side

The selected subject's options and information.

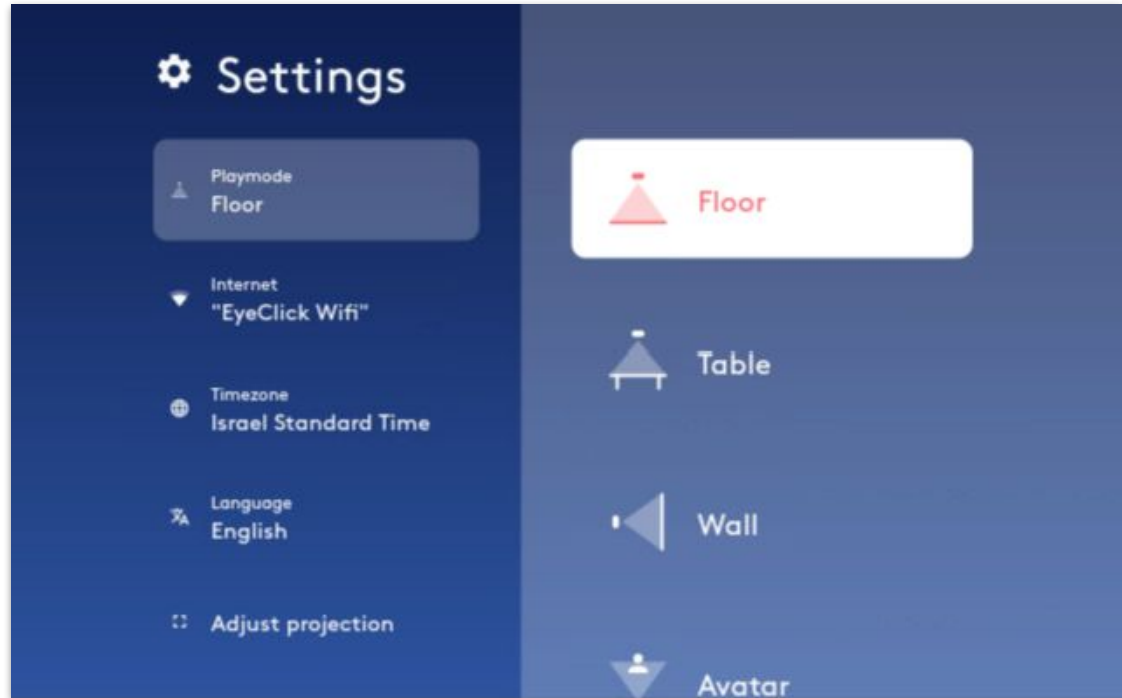


7. Settings / 1. Playmode

Browse the **playmodes** and select which one to set using the **OK button** on your remote control.

Please note

Any playmode change requires **physically adjusting** the device's **camera** and **mirror**, as well as **calibrating** the **motion sensor**.

 Choose your desired playmode and follow the displayed instructions.

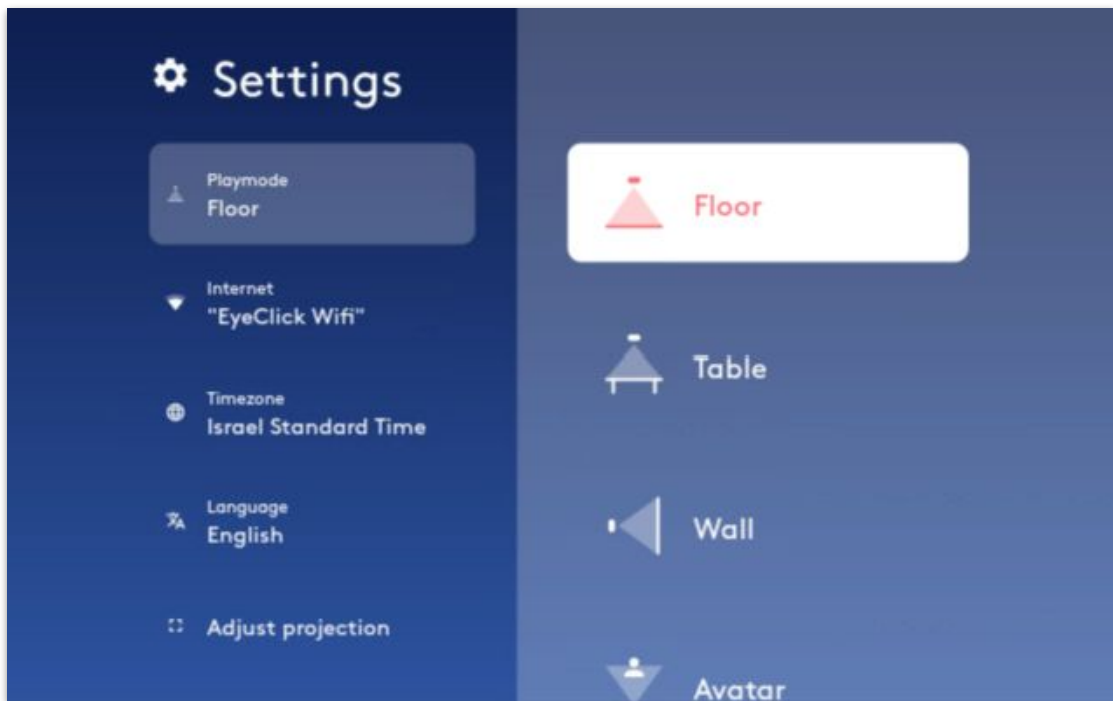

7. Settings / 2. Internet

 
The **currently used** internet network will appear at the **top**.

Browse the **available networks list** using the **arrow buttons** on your remote control and pick a network to connect with using the **OK button**.

Please note

You may be required to provide a **password** when connecting to an internet network.


A **physical connection** using an **Ethernet cable** is recommended.

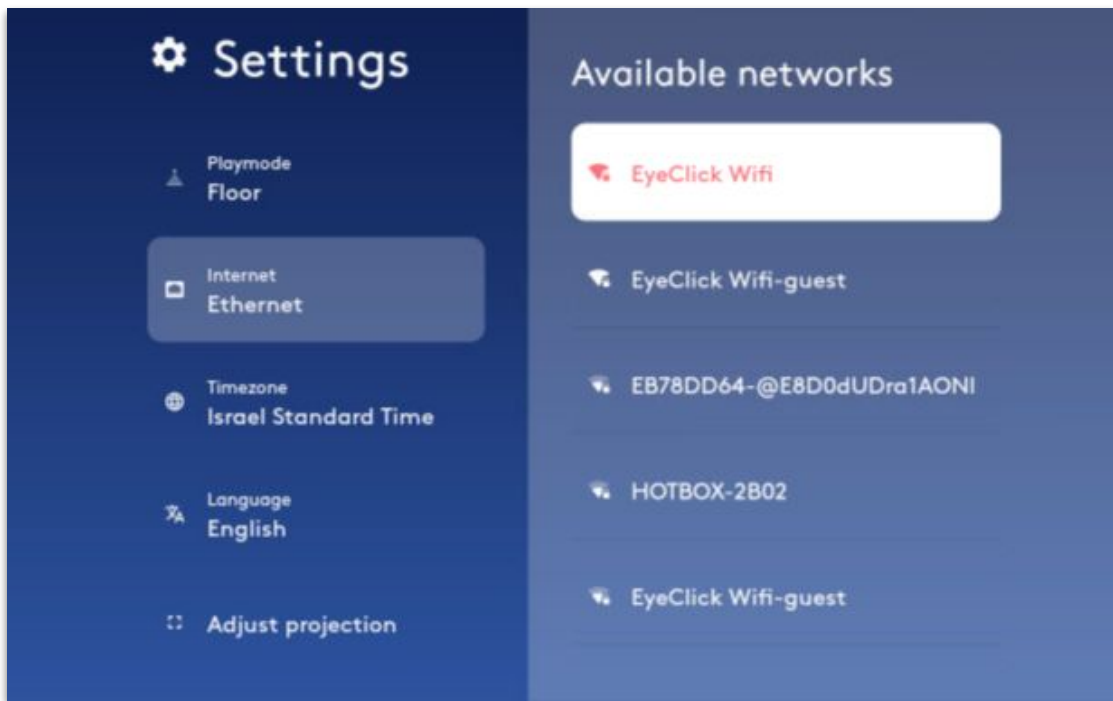

7. Settings / 3. Timezone

You can set a different **Timezone** for your device.

 Browse the list using the **up** and **down arrows** on your remote control, and select using the **OK button**.

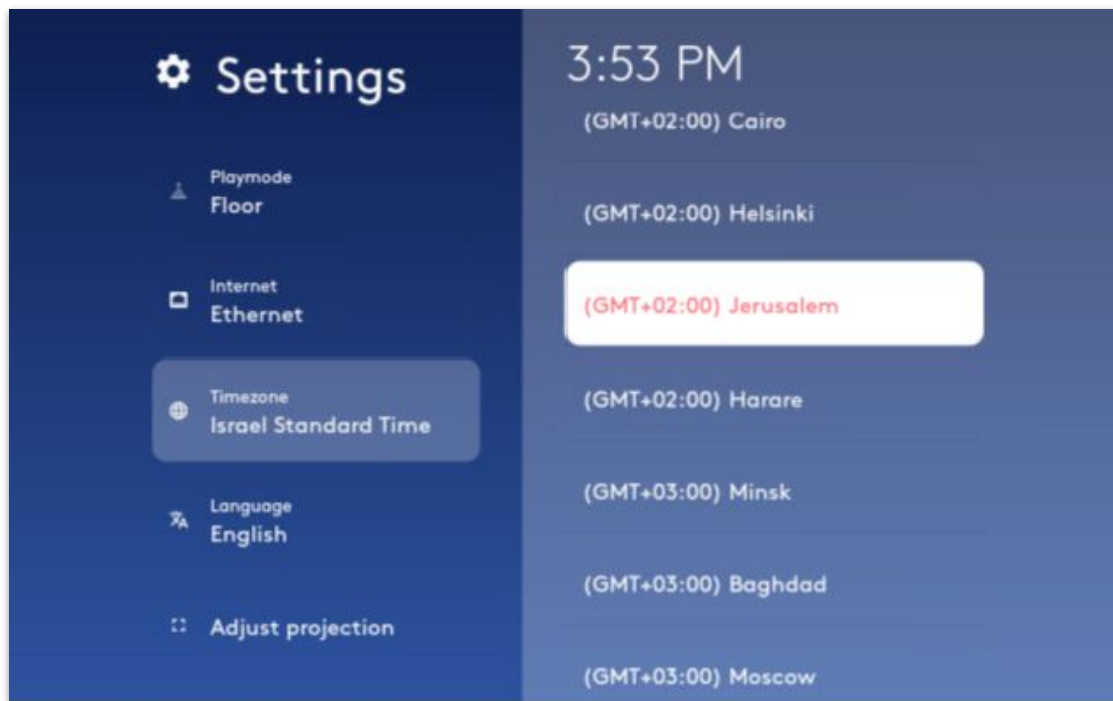

7. Settings / 4. Adjust Projection

You can also adjust the device projection:

Adjust Projection Keystones

If the projection is **skewed**, straighten it by moving its **corners**.

 
Rotate projection 180°

Calibrate Motion Sensor

Run auto-calibration to ensure correct **responsiveness** from the device.

Fit Projection to Table


Fit the projection to a **rectangular** or **circular** table top. **Only available** when the device is set to **Table** playmode.

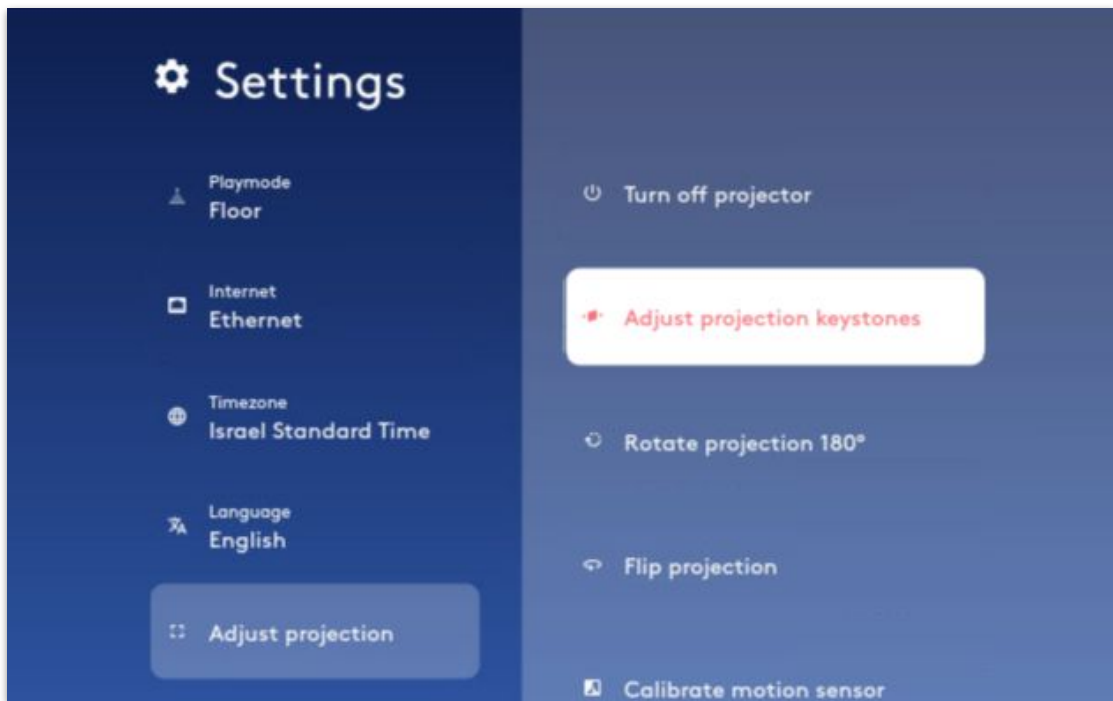

7. Settings / 4. Adjust Projection

Please note

 
Calibrate the device's motion sensor after **any adjustment** to the **projection**, projection **surface**, or if the device **doesn't respond** to your movements correctly.

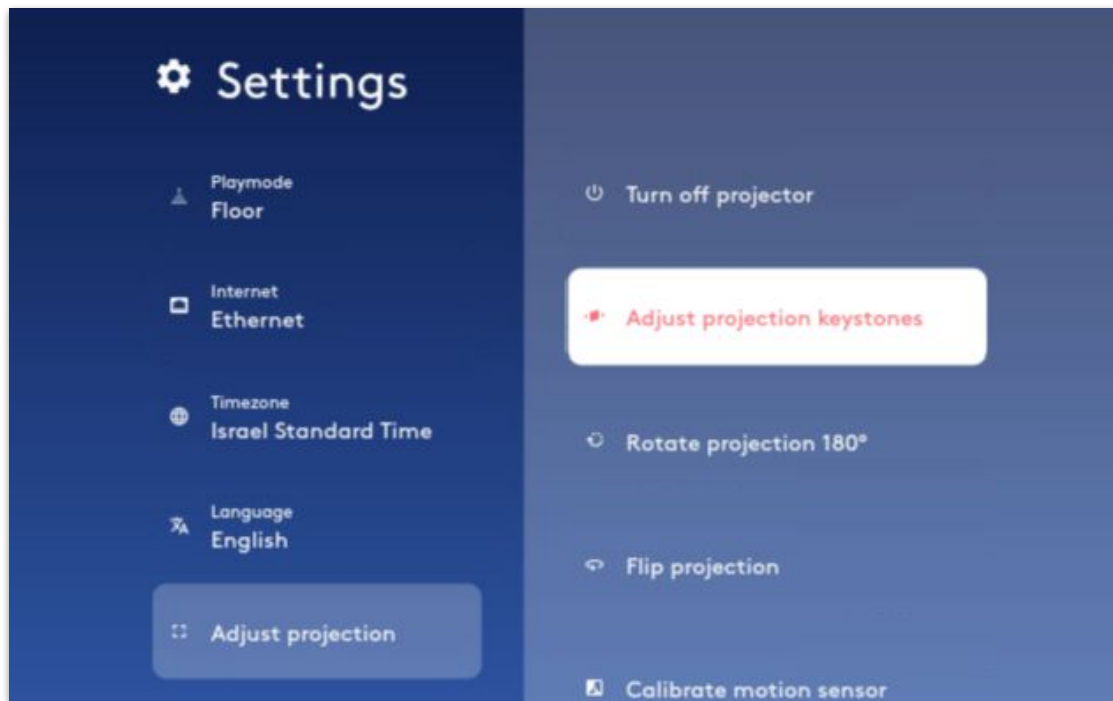

7. Settings / 5. Device Information

View **information** regarding your device.

 
When contacting our **support team**, this is where you might be asked to look.

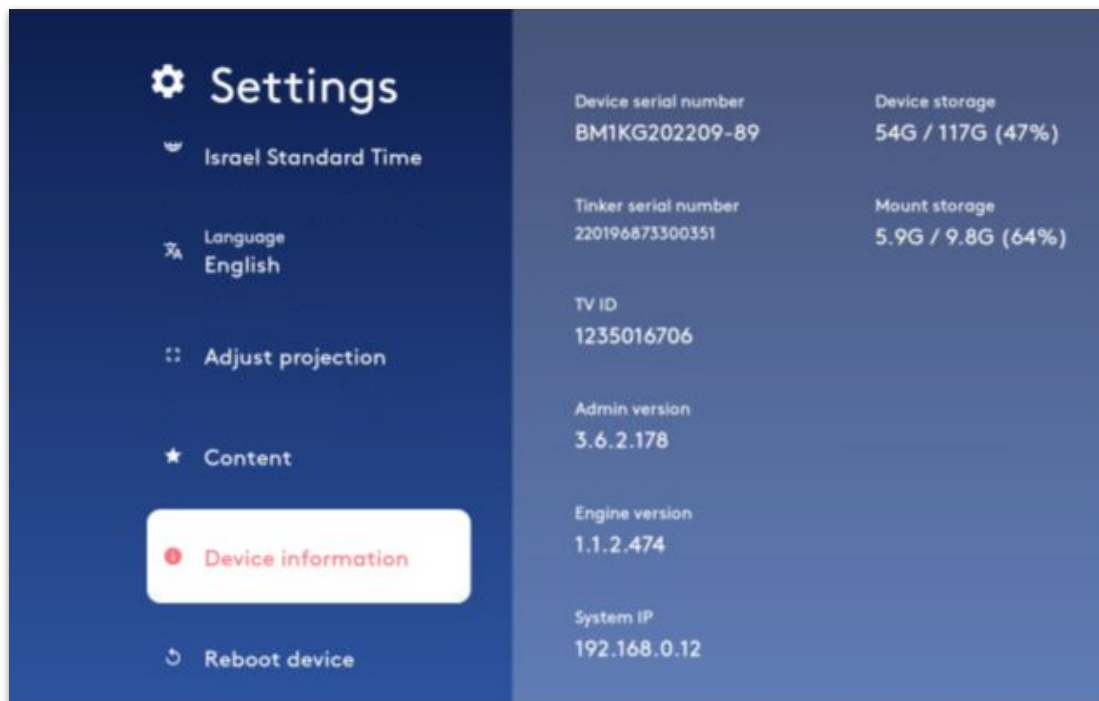

7. Settings / 6. Reboot Device

If needed, you may **reboot** your device here.

 Remember that you can shut off the device's **projector** and enter it into **sleep mode** by simply pressing the **Power button** on your remote control.

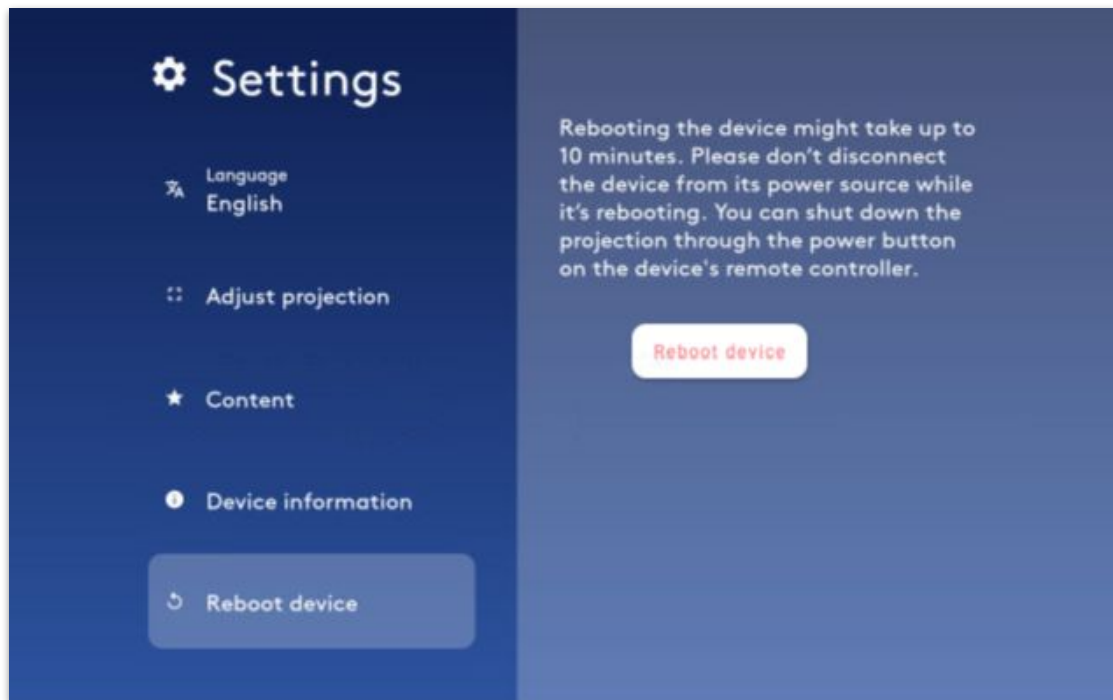

8. Contact Us

We hope you found this guide informative and helpful.

If you have any further questions, don't hesitate to contact us.



Email support.team@eyeclick.com



Call support: 914 219 0279



Open a support ticket

Thank you

